



## Code Changing

### BL 5000

Remove the lock from the door.

Remove the 4 red coloured retaining screws from the back of the keypad. Take extra care to keep the keypad on a flat surface when removing the cover plate as this has several springs attached.

You will now see there are 4 red coloured coded tumblers and 6 blue coloured un-coded tumblers plus 1 clear tumbler (C button).


To change your code push the C button and hold it. You can then easily remove one or more of your coded and un-coded tumblers using the tweezers supplied.

Please note you should never remove the C tumbler or take your finger off of the C button when changing your code.

Please note the different shapes of tumblers before reinserting them into the lock body. Firstly there is a difference in shape between the coded and un-coded tumblers as illustrated below, Secondly when refitting the tumblers into the lock body they must be fitted facing the correct way, again see the illustration below. All square cut-outs must face outwards. Once inserted correctly the dimple on the tumblers will sit in the cut-out on the coding chamber.

After you have refitted the tumblers and have made a note of the new code please replace the metal plate and the 4 red screws.

Please note-with the tumblers provided you can either increase the number of digits in your code to 5-6 or reduce to 2-3.

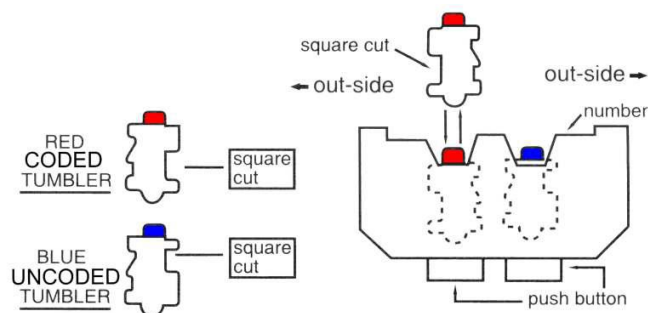

Please call our helpline for spares, repairs and technical advice – 01708 225700

